

Driller's Cabin Third Party Cable Entry

Third party customers must use the kit described in this bulletin in order to create an entry point through the Driller's Cabin without entering the area where equipment is installed.

Recommendation

Contact Canrig RigLine 24/7™ Support Line to order the Third Party Cable Entry Kit, AY22267. Install the kit or arrange for Canrig Field Service to install it.

Refer to the drawing included with kit for installation instructions.

Canrig Part Number	Description	Quantity
AY22267	Kit, D. Cabin Third Party Cable Entry	1

Procedure

The following graphics shown for reference only. Refer to drawing included with kit for dimensions.

The third party cable entry kit will be installed on the side wall of the Driller's Cabin plug panel. Plug panel door must be rolled up completely before starting the installation. See Figure 1.

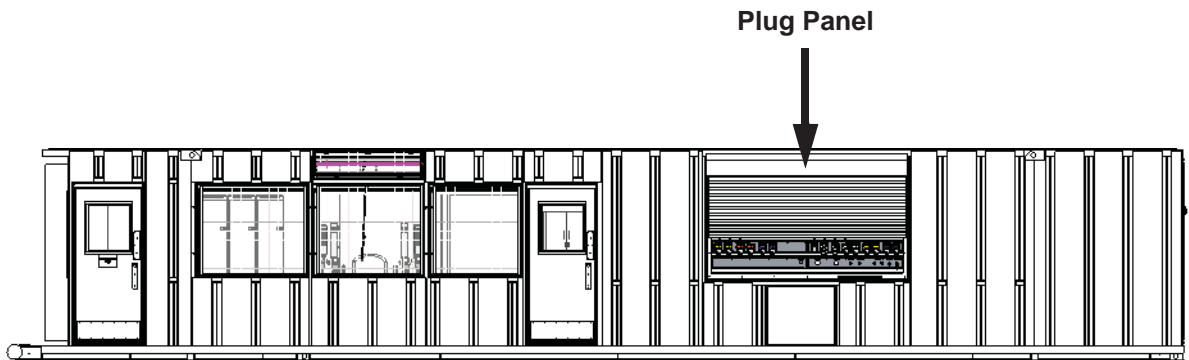


Figure 1: Driller's Cabin Plug Panel Access Door

Figure 2 shows the plug panel door rolled all the way open and AY21793 hole cover removed.

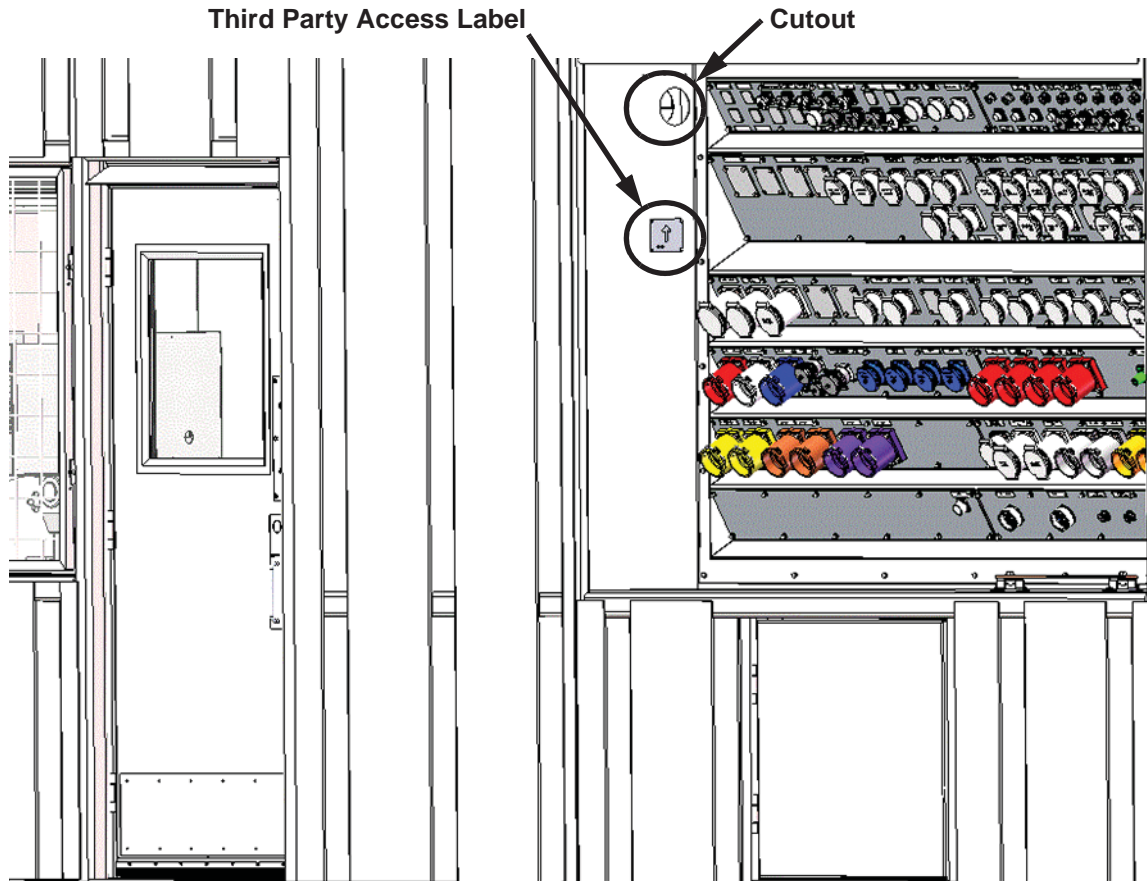


Figure 2: AY21793 Cover Removed

Figure 3 shows hole saw cutout inside of cabin for conduit routing.

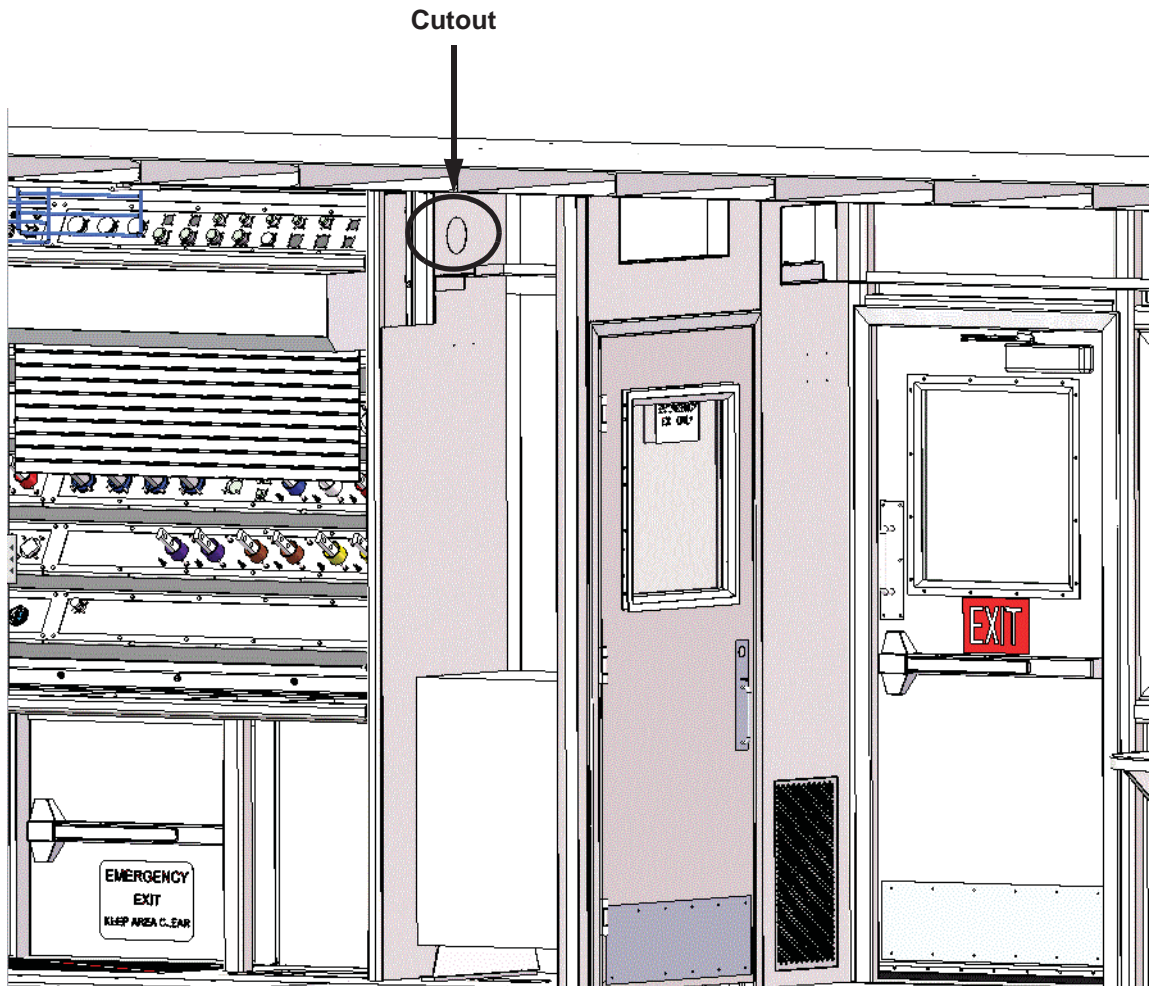


Figure 3: Hole Saw Cut for Conduit Routing (Inside View)

Figure 4 shows kit installed with cover and labels.

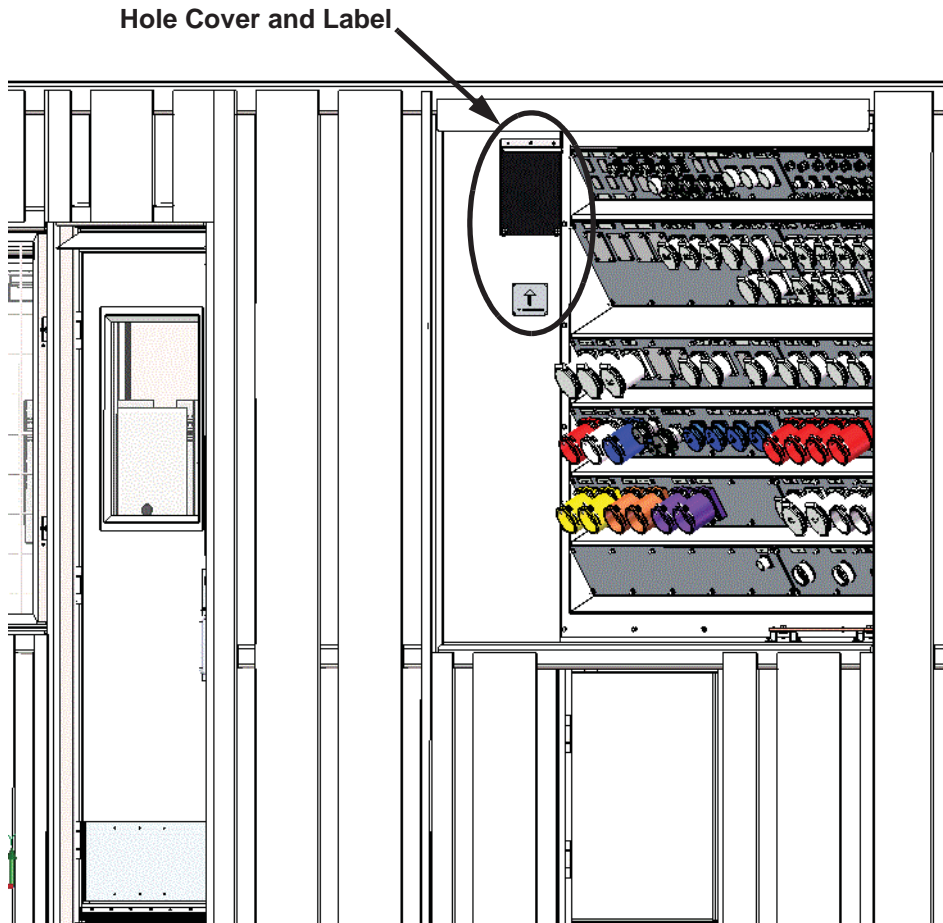


Figure 4: Third Party Cable Entry Installed (Outside View)

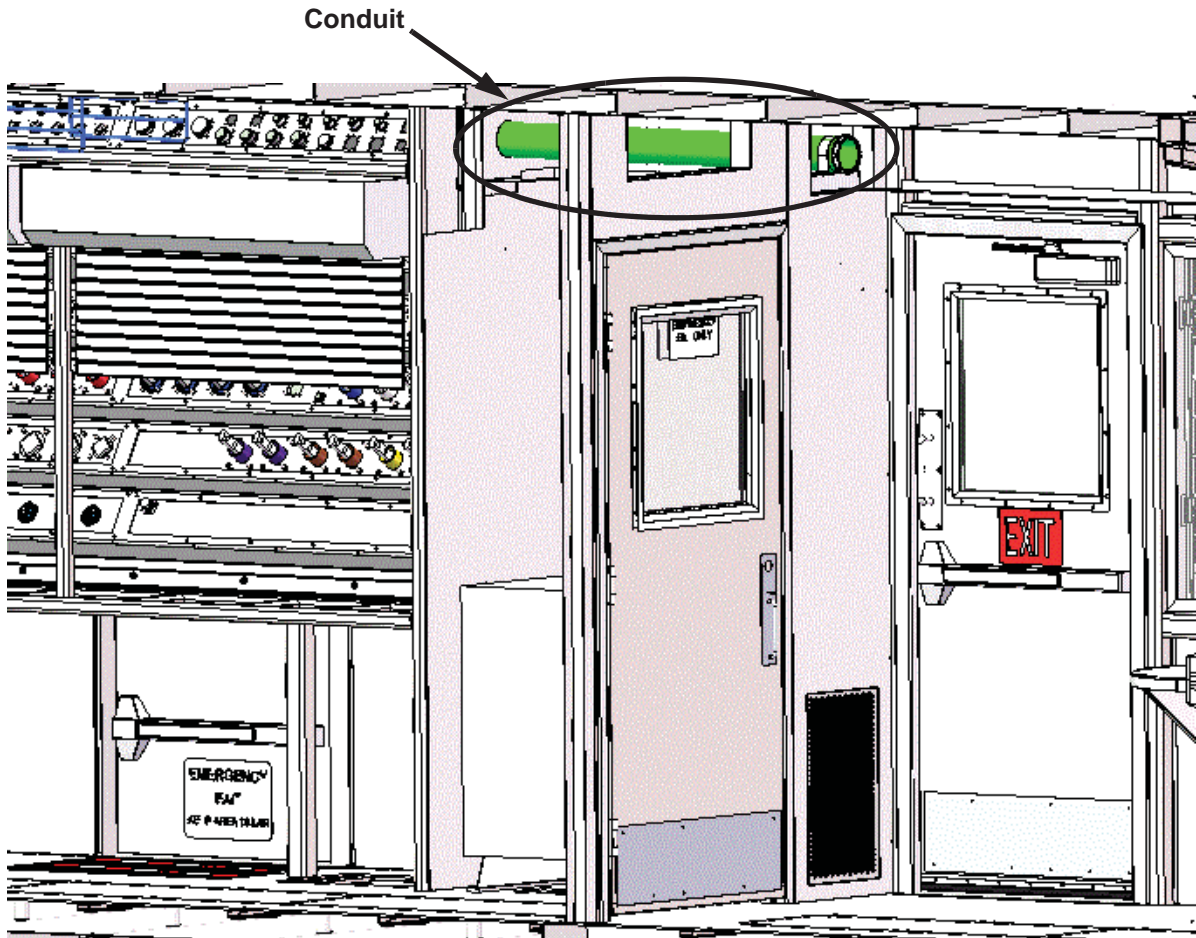


Figure 5: Third Party Cable Entry Installed (Inside View)